

	BIO-PM 4.28 Amana Radar Range Microwave Oven	
	<i>Document #: 1935</i>	<i>Page 1 of 2</i>
	<i>Revision #: 1</i>	<i>Issued Date: 11/14/2017</i>
	<i>Document Manager: Kristin Schelling</i>	<i>Approved By: Jeffrey Nye</i>

4.28 Amana Radar Range Microwave Oven

4.28.1 Scope

For use in preparing nonflammable reagents and for thawing nonflammable components and reagents.

4.28.2 Background Information

Amana Use and Care Manual

4.28.3 Operation

4.28.3.1

Be sure the appliance is properly grounded.

4.28.3.2

Do not immerse cord or plug in water.

4.28.3.3

Do not heat sealed containers. They may explode.

4.28.3.4

Do not heat metal in oven.

4.28.3.5

If materials inside the oven ignite, keep the door closed to prevent spread of fire. Turn off oven and disconnect power cord.

4.28.3.6

Do not attempt to operate with the door open.

4.28.3.7

Make sure the door fits and closes securely. Do not operate if damaged.

4.28.3.8

The oven should only be serviced by a qualified service technician.

4.28.3.9

Do not restrict air flow around oven.

	BIO-PM 4.28 Amana Radar Range Microwave Oven	
	<i>Document #: 1935</i>	<i>Page 2 of 2</i>
	<i>Revision #: 1</i>	<i>Issued Date: 11/14/2017</i>
	<i>Document Manager: Kristin Schelling</i>	<i>Approved By: Jeffrey Nye</i>

4.28.3.10

Objects coming from the oven are often extremely hot. Be sure to use hand protection.

4.28.3.11

Clean the inside of the oven using a mild detergent and warm water with a soft sponge or cloth. Never use an abrasive cleaner or pour water into the bottom of the oven.

4.28.3.12

The spatter shield in the top of the oven may be removed for cleaning. Great care must be taken not to bend the microwave antenna. Wash the shield in hot soapy water. Refer to manual for removal and replacement instructions.

4.28.3.13

Clean the exterior of the oven and the louvers of the discharge air vents on the back with a soft, damp cloth.

4.28.3.14

To change a light bulb: Unplug the oven. On the upper left side of the back of the oven is a metal plate with one screw. Remove the screw and remove the plate. Take out the bulb. Replace with a 40 watt, 115-125 volt appliance bulb. Put the plate back on and tighten the screw. Reconnect the oven to the power outlet.